
	•		
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TE-22301	side assembly	2
2	TE-22304	1.25x48 sched 40	2
3	TE-22306	15/32" horizontal	2
4	TF-22307	15/32" diagonal	2

REVISIONS						
ZONE	REV.	DESCRIPTION	DATE	APPROVED		
Al	Α	Changed Title	1/4/2022	DAF		

Material	QTY
15/32" plywood	1 sheet
2" x 6" x 8'	4
48" 1.25 sched 40 steel pipe	2
1.5" wood screw	40
2.5" wood screw	20

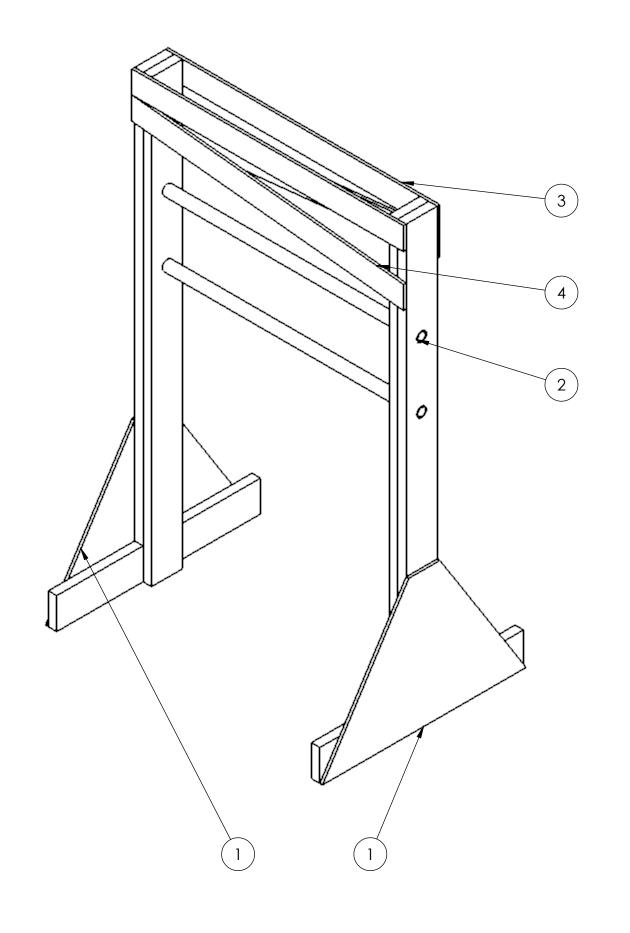

## Assembly instructions:

- 1. Attach (3) to (1) flush to the top with 1.5" wood screws.
- 2. Attach (4) to (1) butted up to (3) with 1.5" wood screws.
- 3. Insert 2 into 1.

## Notes:

- (2) has two locations one for the rung, the low rung and mid rung. 1.
- Test with only one rung location installed at a time for most representative experience.



3